



# INSTALLATION INSTRUCTIONS

## MSD Pro Mag 12 LT Chevrolet, PN 7908 Ford, PN 7915 Chrysler, PN 7910

### Parts Included:

1 - Pro Mag Lt	1 - Flat Washer
1 - Billet Clamp	1 - Nut
1 - Set Screw	2 - O-rings (PN 7908 only)
1 - Lock Washer	

1. Install the set screw into the intake manifold or engine block.
2. Install the magneto into the engine. On Chevrolet engines, position it so the hold down clamp will align with the housing's anti-rotation collar.
3. Install the billet clamp over the set screw and on to the collar of the magneto. Put the flat washer, lock washer and the nut onto the tud and tighten the assembly.

**Note:** On Chevrolet applications, it is recommended to locate the wiring harness of the generator towards the left side injector stack (Figure 1). This also puts the timing indicator of the magneto in a position that should be easy to view. Also position the band clamp's retaining screw so it points to the left and is in the back of the magneto, close to the firewall. On Ford and Chrysler engines, rotate the base until the pointer is easy to view.

4. Locate which cap terminal is going to be the number one cylinder. Mark on the housing this location then remove the cap (Figure 2).
5. Loosen the band clamp and position the generator so



Figure 1 Positioning the Chevrolet Generator.

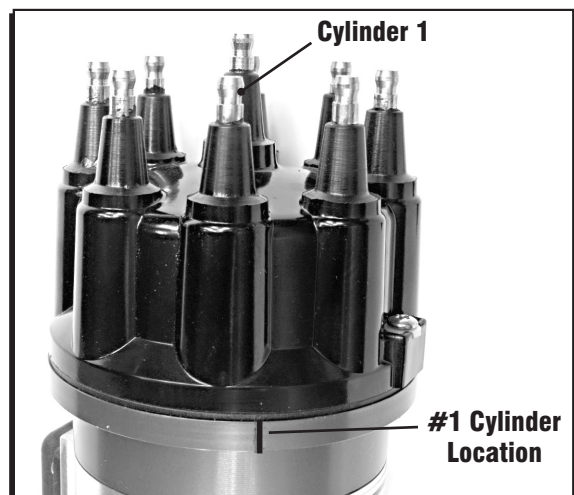


Figure 2 Marking the Number One Location.

the rotor tip is just leading into the number one cylinder mark (from step 4) indicating the number one cylinder (Figure 3). This will put the timing approximately 2°-3° within TDC or where you have the timing set. **Note:** Always verify timing with a timing light.

Chevy/Chrysler	-	Clockwise Rotation
Ford	-	Counterclockwise Rotation

6. Install the cap and spark plug wires.



Figure 3 Positioning the Rotor Tip.

**Recommendation:** It is recommended on Chevrolet applications to put the number one cylinder in the position shown in Figure 4. The custom wire sets MSD offers are designed for this setup.

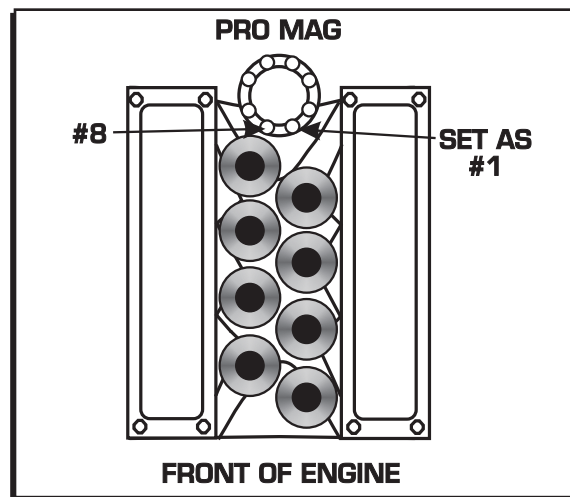


Figure 4 Recommended Chevrolet Installation Position.

7. **Chevrolet applications only:** Install the gasket and apply a liberal amount of the supplied lubricant to the distributor gear and O-rings. (The supplied O-rings can **only** be used if the block has been modified as shown in Figure 5.)


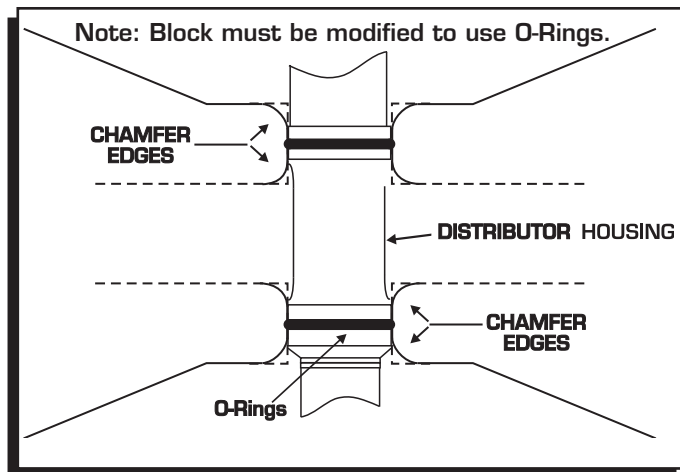


Figure 5 Chevy Blocks must be modified to accept O-rings.

**TIMING TAPE**


There is a timing tape supplied with the Pro Mag. Once the timing is set and verified, apply the tape to the side of the generator aligning it with the pointer on the magneto base (Figure 6). This is not meant for exact timing changes, but will help for a guide when tuning.

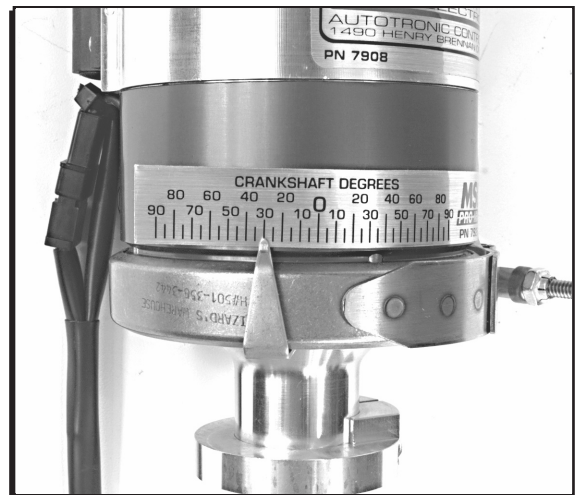

**Figure 6 Applying the Timing Tape.**

**WIRING**

Figure 7 show the wiring of the Pro Mag system.

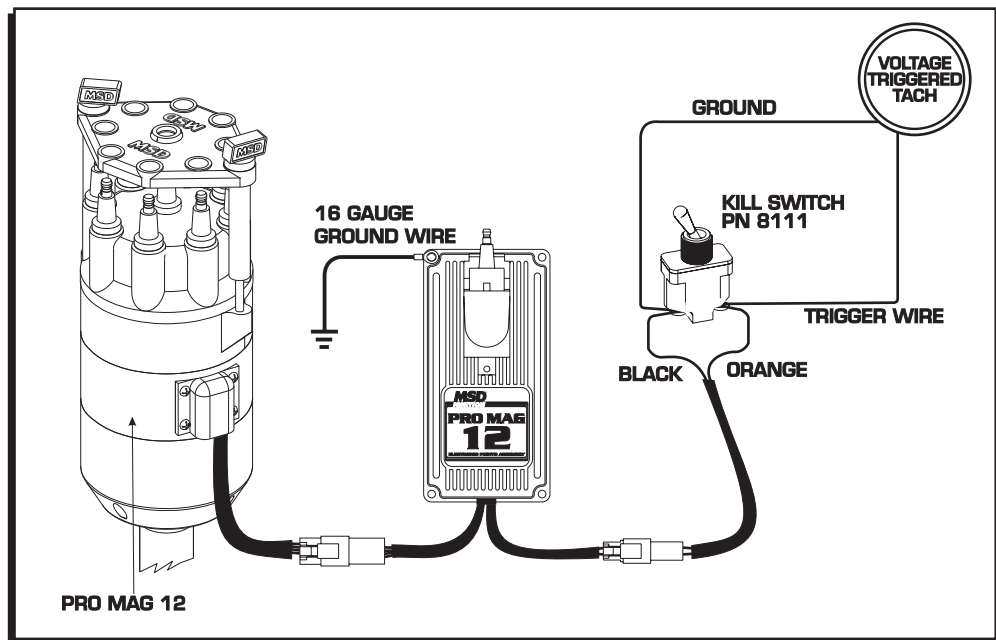

**Figure 7 Wiring the Pro Mag 12 Lt.**

Maintenance Parts		
Cap/Rotor	-	PN 7909
Gears:		
Chevrolet	-	PN 8472 (.006" Oversized)
Chrysler	-	
Ford	-	PN 8585
Timing Tape	-	PN 7926
Kill Switch	-	PN 8111
Pro-Billet Clamps:		
Chevrolet	-	PN 8110
Chrysler	-	PN 8540
Ford	-	PN 8010
Band Clamp	-	PN 8146

